


Quick Start Guide Sensor Node

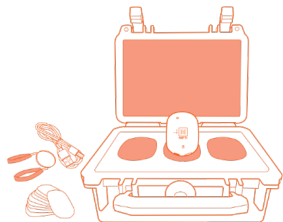

- 1** Unpack NIFTI sensor nodes and accessories




- 2** Connect the NIFTI node to computer using supplied USB cable



- 3** Download the latest Configuration App from nifti.aero/updates/download



- 4** Configure NIFTI Capture and Measure options

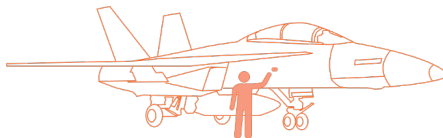

- 5** Disconnect NIFTI sensor nodes and install onto location of interest



- 6** Connect the NIFTI node to computer to download recorded data

LED Status Guide and Sensor Anatomy



LED Activity			NIFTI Node Status	
			All LEDs Off	OFF
			Amber Solid On	System Initialising
			Red Solid On	System Fault Contact MEMKO for assistance
			Red Faint On	Battery Charging
			Green Slow Blink	System Idle
			Red Faint On Green Blink	Connected to PC with USB and Battery Charging
			Green Blink	Connected to PC with USB and Battery Charged
			Green Fast Blink Red Fast Blink	System Capturing Data
			Amber Fast Blinking	Wireless Time Synchronisation



Capture/Sleep Times:

2 / 33 Hrs @ 4000Hz

8 / 22 Hrs @ 1000Hz

Charge Time:

3 Hrs to Fully Charge

For Help and Technical
Support Visit:

nifti.aero/support